CLASSES I, II, II STAND-UP, III, IV, & V TOYOTA MODEL CODING SYSTEM

INSTRUCTIONS: Look only at placeholders that are present for the class of your truck. If the spot says "not present," move on to the next spot to determine the meaning of the next digit/letter in your code. No truck has all nine spots filled. For example, a class I truck has eight of the nine spots present, because it is not present in the second placeholder. Thus, the third placeholder interprets the second section in the class I code. NOTE: "IIS" refers to class II stand-up electric riders.

CLASS I:

TYPE OF MODEL

No code=standard 20=high speed 30=dust-proof 40=high capacity

battery

CLASS II, IIS, III:

Not present

CLASS IV. V:

ENGINE TYPE

0=standard

4=5R or 4Y

5=5P or GM

6=optional type

CLASS I, II, IIS, III: Not present

CLASS IV, V:

CONSTRUCTION

FEATURES

No code=clutch & single front tire

1=clutch & dual front tire

2=power shift

transmission

3=dual front tires with power shift transmission

CLASS

I, III, IV, V:

MODEL TYPE

F=forklift truck T=towing tractor H=hand-operated S=shovel loader

CLASS II, IIS:

Not present

ALL CLASSES:

MODEL CODE

No code=original

2=second gen.

3=third gen.

4=fourth gen.

5=fifth gen.

6=sixth gen. 7=seventh gen.

8=eiahth aen.

ALL CLASSES:

CONSTRUCTION

tire (or counter-

balance or 2-wheel

C=cushion tire (center control model for class

(end control model for

class III)

J=low profile model

N=narrow aisle

P=order picker

ALL CLASSES:

POWER SOURCE

B=battery & electric

G=gasoline/propane

D=diesel

(CNG)

V=very narrow aisle

W=walk-behind

SPECIAL

No code=pneumatic

drive for class IV)

A=high capacity

D=double reach

E=three wheel model

R=reach

S=straddle reach

CLASS

I, II, IIS, IV, V:

MODEL

APPLICATION

No code=

manufactured in Japan

A=manufactured in

Japan for N. America

F=manufactured by

TIESA

N=manufactured in

Indonesia

U=manufactured in the United States

CLASS III:

Not present

CLASS I:

OPTIONAL BATTERY H=high capacity battery

CLASS II, IIS, III, IV, V:

Not present

CLASS

I, II, IIS, IV, V: LOAD CAPACITY

15=3,000 lbs

17=3,300 lbs

18=3,500 lbs

19=3.800 lbs

20=4,000 lbs

23=4,500 lbs

25=5.000 lbs

28=5.500 lbs

30=6,000 lbs

33=7.000 lbs

35=8.000 lbs (7.000

lbs for class I)

40=9,000 lbs (8,000

lbs for class I)

45=9,000 lbs

50=11,000 lbs (10,000

lbs for class I)

55=11.000 lbs

60=13,000 lbs

70=15.000 lbs

80=18.000 lbs

100=22.000 lbs

115=25.000 lbs

135=30.000 lbs

150=33.000 lbs

CLASS III:

LOAD CAPACITY

20=4,000 lbs

30=5.000 lbs

40=6.000 lbs

50=10.000 lbs